


1.3 Interface Resources Notes

This section details the development of each board or module interface definition and occupied by pin CPU resources, CD-ROM also complete the development board schematic and package library (divided in PDF format and Protel99SE format), for use and reference to development board.

1.3.1 Address Space Allocation and the Definition of Chip Select Signals

S3C2440 supports two startup modes: one is startup from NAND flash (such as this mini2440) two is startup from NOR flash. In the two startup mode, all chip select memory space allocation is different, the following chart.

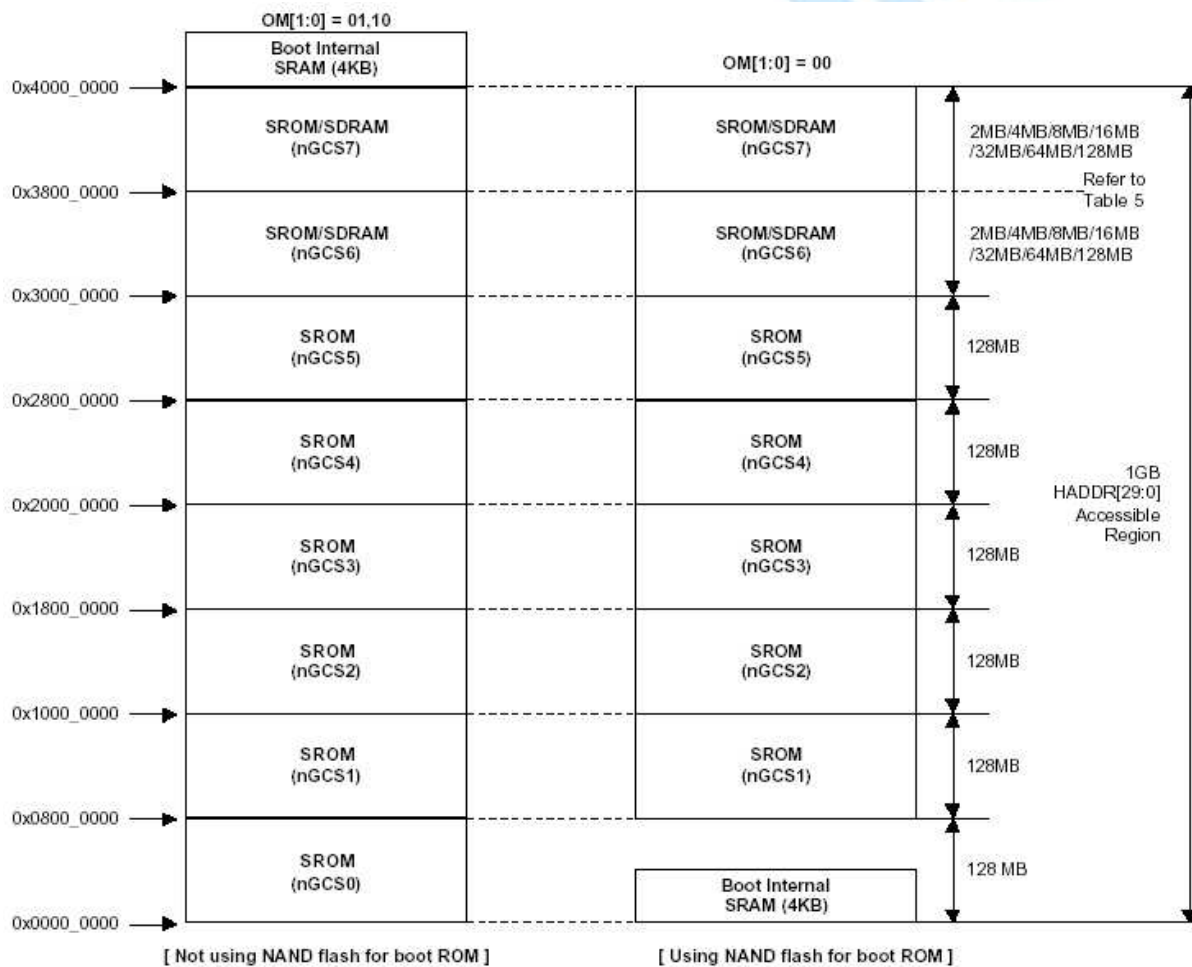


The figure above, the left is a piece nGCS0 election NOR flash memory boot mode distribution map. The right is the NAND flash memory boot mode distribution map. Description:

SFR Area as a special control register address the following are the device address space allocation and the definition of the chip select before carrying out the device address, there is one thing to note, nGCS0 chip select space in different start-up mode, the mapping of the device is not the same. By the map can know: in the NAND flash startup mode, the 4 Kbytes Boot Internal SRAM be mapped to the selected nGCS0 space. In the NOR flash startup mode (non-NAND flash boot mode), and the external memory connected nGCS0 NOR flash has been mapped to the chip select space nGCS0 SDRAM address space: 0x30000000 - 0x34000000.


1.3.2 SDRAM Storage Systems

Mini2440 the use of two external 32 Mbytes a total of 64 Mbytes of SDRAM chip (model as follows: HY57V561620FTP), generally referred to as memory, and then together they form a 32-bit data bus width, it can be in order to increase the speed of access, so they are used as a chip select nGCS6, according to 5-2 in the CPU Manual Introduction, we can see that this determines the start of their physical address is 0x30000000, the following is taken from the schematic diagram in Mini2440 schematic diagram of the SDRAM part.

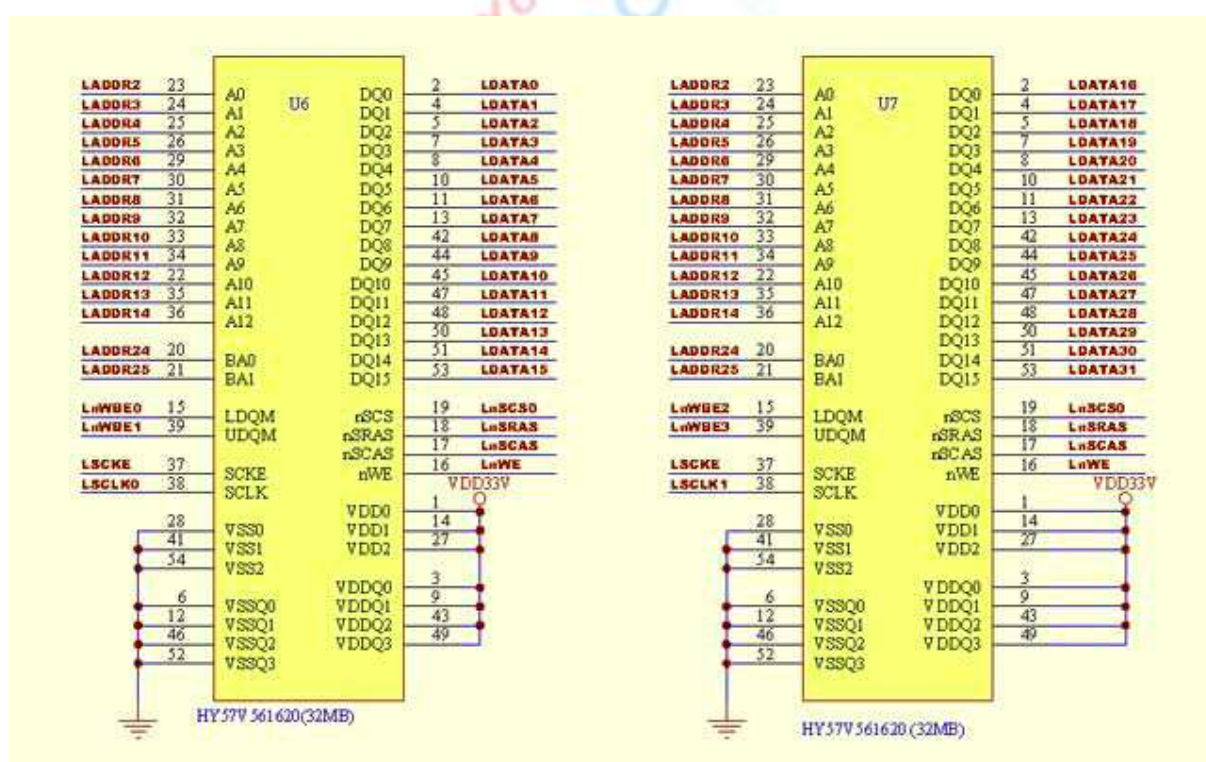


1.3.3 Flash Storage Systems

Mini2440 have two flashes, one is the NOR flash, model SST39VF1601, size 2 Mbytes. The other is the NAND flash, model K9F1208, size 64 Mbytes. S3C2440 support both flash to start the department of EC, by DIP switch S2, you can choose from NAND or NOR for your system. Most of the actual products using a NAND flash chip are enough, because we learn for the convenience of users, it also retains the NOR flash. NAND flash does not have the address line, it has a dedicated control interface connected with the CPU, for the 8-bit data bus, but this does not mean that NAND flash read and write data will be very slow. Most of the USB or SD cards are made of NAND flash equipment. From the following schematic can be seen, NOR flash used a total of A1-A22 address bus 22 and 16 data connected with the CPU bus, please note the address is started from the A1, which means that each time it is the smallest unit of read and write 2-byte. Therefore, according to schematic, the design is compatible with support for total maximum 8 Mbytes NOR flash, the actual development of our on-board only be the A1-A20 address line, as with the A21, A22 connected to the corresponding pin is SST39V1601 vacated.

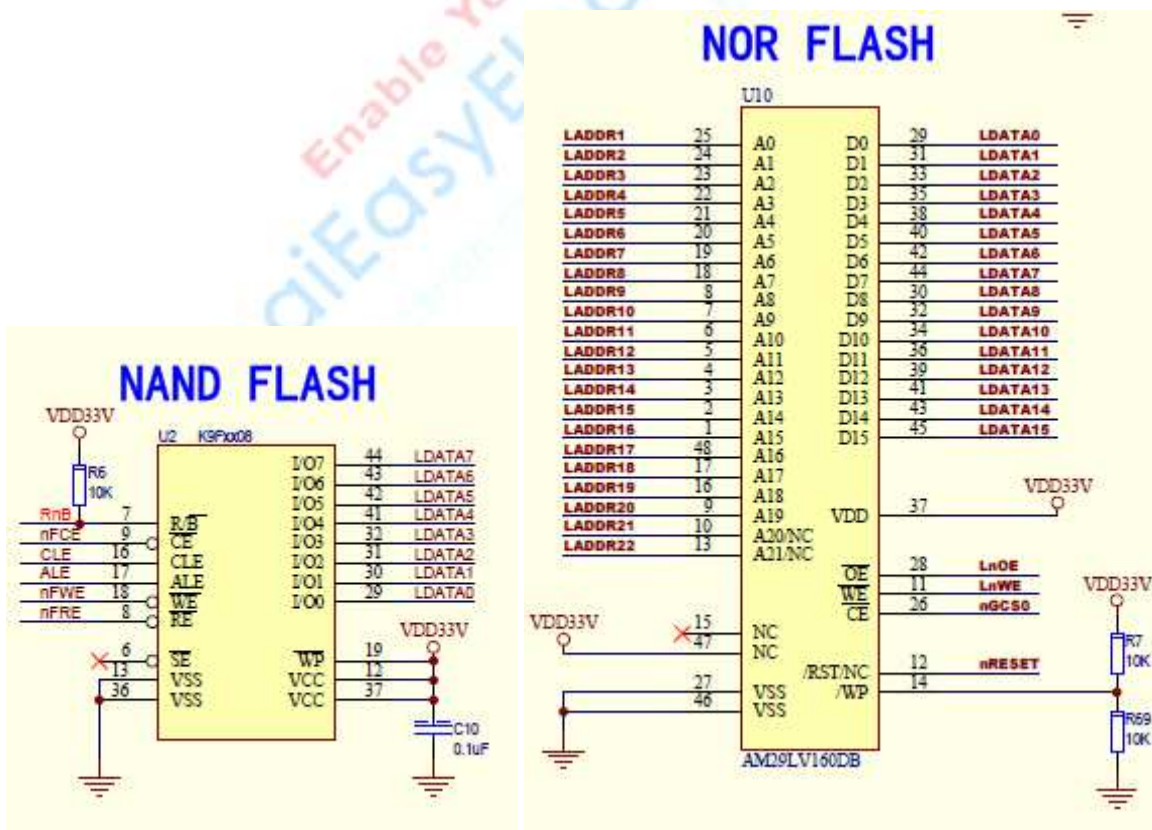


1.3.4 Power Supply System and Interface

The development board's power supply system is relatively simple, direct the use of an external 5 V power supply, and generated through the step-down the entire chip line unification of the 3 required voltages: 3.3 V, 1.8 V, and 1.25 V. Please note that this development board is not designed for handheld mobile devices, so it does not have the best power management circuit. The whole system of power-off is controlled by the S1 DIP-switch, and it cannot switch by machine software.

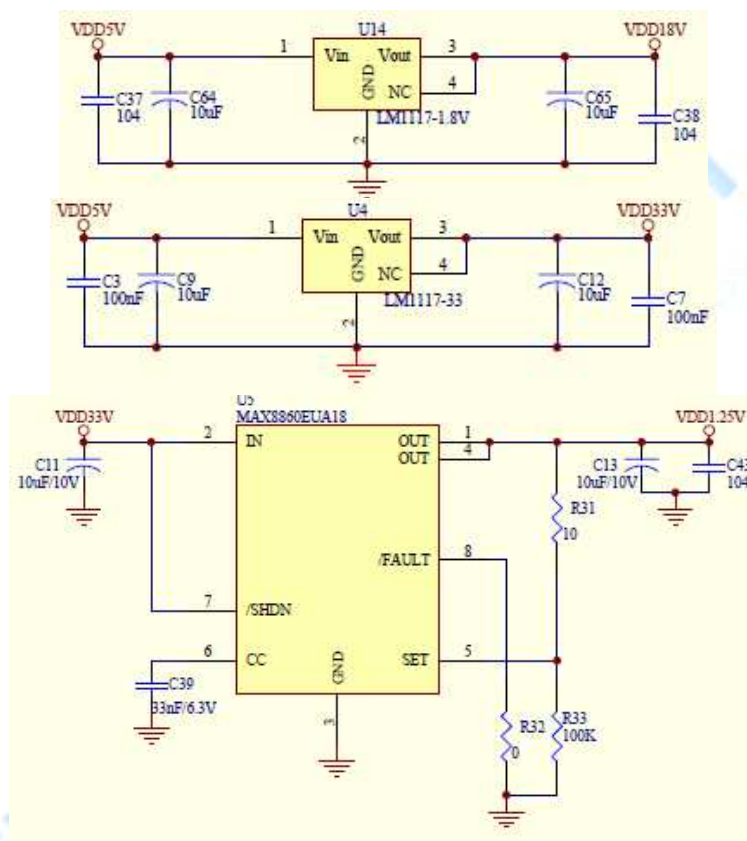


For the convenience of users of other external power supply, we also designed a power supply interface CON8, it is a white 2.0 mm pitch socket single-row, middle ground both sides are 5 V. Note that these two are not connected 5 V, one connected to the external power supply 5 V, and one connected to the DIP-switch S1 through after 5 V. Their connections and the corresponding nominal kind of see the figure below.

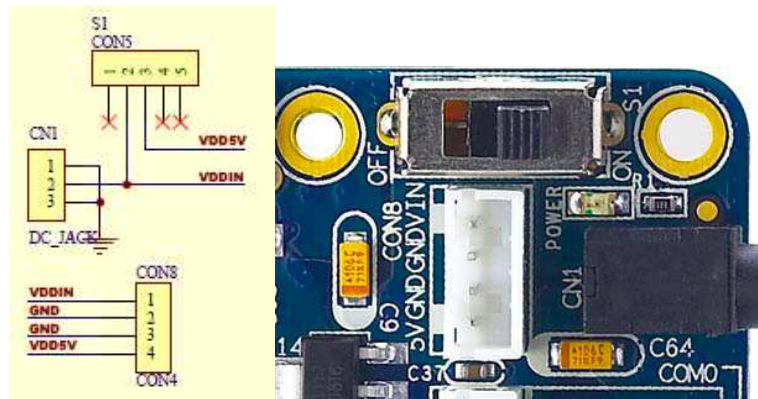

1.3.5 System Reset

The development board using professional MAX811 reset chip needed to archive low CPU reset, see the figure below.

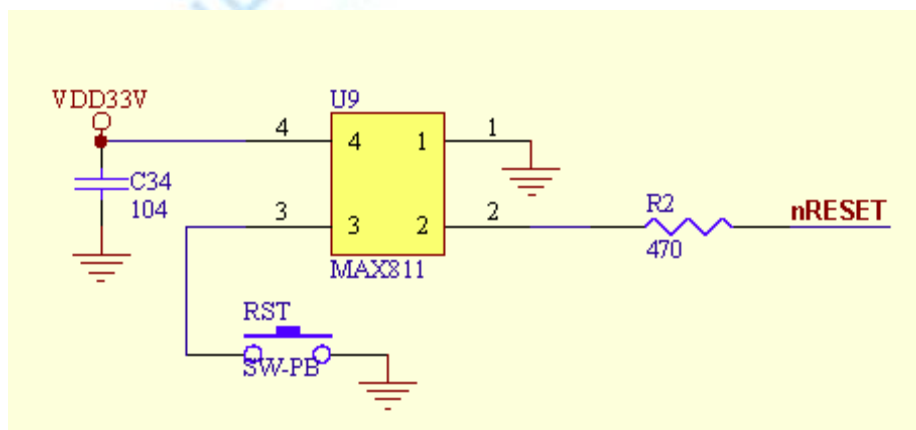

1.3.6 User LED


LED is the development of the state of the most commonly used instructions of equipment, the development board has 4 user-programmable LED, they are straight then with the CPU of the GPIO connected, active-low (light), the detailed occupation of the resources in the following table.

	LED1	LED2	LED3	LED4
GPIO	GPB5	GPB6	GPB7	GPB8
Reusable for	nXBACK	nXREQ	nXDACK1	nDREQ1
Network Name	nLED_1	nLED_2	nLED_3	nLED_4

1.3.7 User Button

The development board has a total of 6 user button testing, they were directly from the CPU interrupt pin to bring out a low-power level-triggered, these pins can be multiplexed and special features for the GPIO port, in order to lead them as a user other purposes, this 6-pin lead through CON12, and CON12 button 6 is defined as follows.


	K1	K2	K3	K4	K5	K6
Corresponding interrupt	EINT8	EINT11	EINT13	EINT14	EINT15	EINT19
GPIO Reuse	GPG0	GPG3	GPG5	GPG6	GPG7	GPG11
Special function 1	nothing	nSS1	SPIMISO1	SPIMOSI1	SPICLK1	TCLK1
CON12 corresponding pin	CON12.1	CON12.2	CON12.3	CON12.4	CON12.5	CON12.6

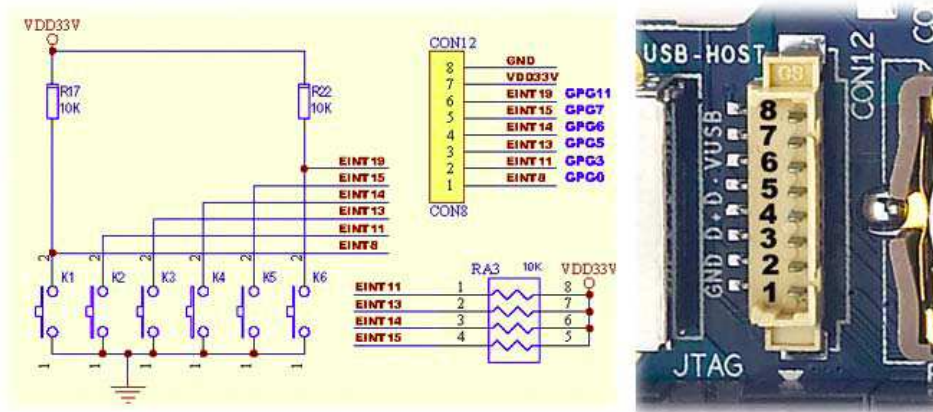

Description: CON12.7 for the power supply (3.3V), CON12.8 as to (GND)


1.3.8 A/D Input Test

The development board can lead to a total of 4 A/D (analog-to-digital conversion) the conversion channel, which is located on the board of CON4 GPIO interface (see GPIO interface introduced), in order to facilitate testing, AIN0 connected to the development of on-board adjustable resistor W1, the principle of map are shown below.

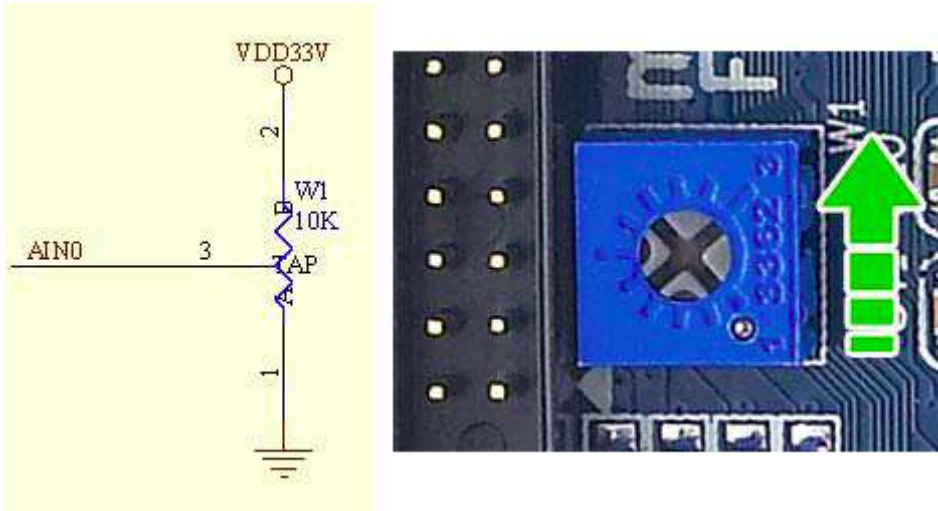


1.3.9 PWM Control Buzzer

SPEAKER development board through the buzzer PWM control schematic diagram is as follows, which may be conveniently GPB0 have the software set to PWM output.

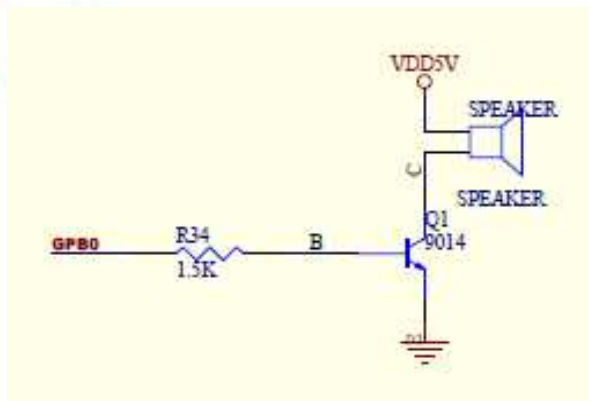


1.3.10 Serial Port

S3C2440 own total of 3 serial ports UART0, 1, 2, which UART0, 1 may be a combination of full-featured serial, in most applications, we only used 3 simple serial functions (this development board provided by Linux and WinCE this driver is also installed), known as the transmit (TxD) and receive (RxD), corresponding to their board of CON1, CON2, CON3, these 3 interfaces are drawn directly from the CPU is TTL level. For the convenience of users, their UART0 done in RS232 level converter, which corresponds to COM0, can be directly attached to each other to connect with PC-pass hearing. CON1, CON2, CON3 in the development of on-board location and schematic diagram of the relationship between the definitions of the connection as shown below.

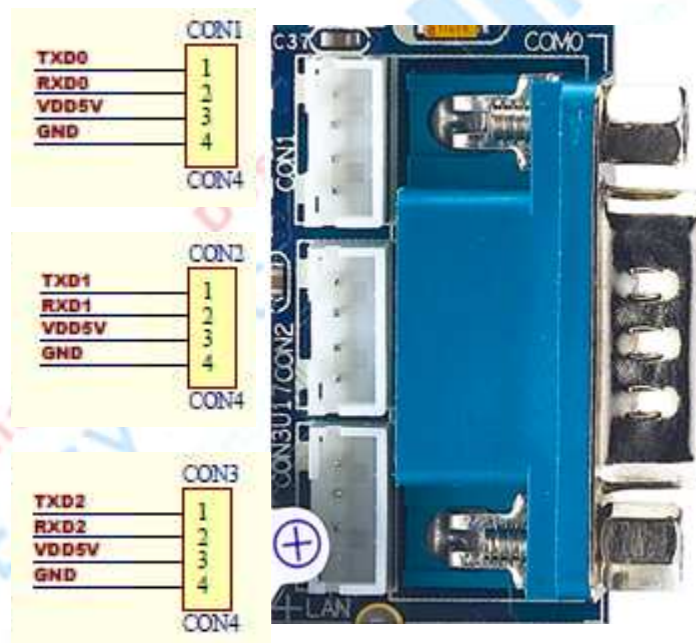


1.3.11 USB Interface

The development board has two USB interfaces, a USB Host, and general PC it's USB interface is the same, can connect the USB camera, USB keyboard, USB mouse, such as a common USB peripherals, another is USB Slave, we generally use it to download to the target board, when the development board loaded with WinCE system, it can use ActiveSync software and Windows system synchronization, when the development board loaded with a Linux system, there is no corresponding driver and application. In order to facilitate the users to control PC's USB Slave and off, we set up USB_EN signal, as figure, it CPU resources used GPC5. We will mention more extensive peripheral USB Host application, please pay attention to our Web site frequently to update the information.

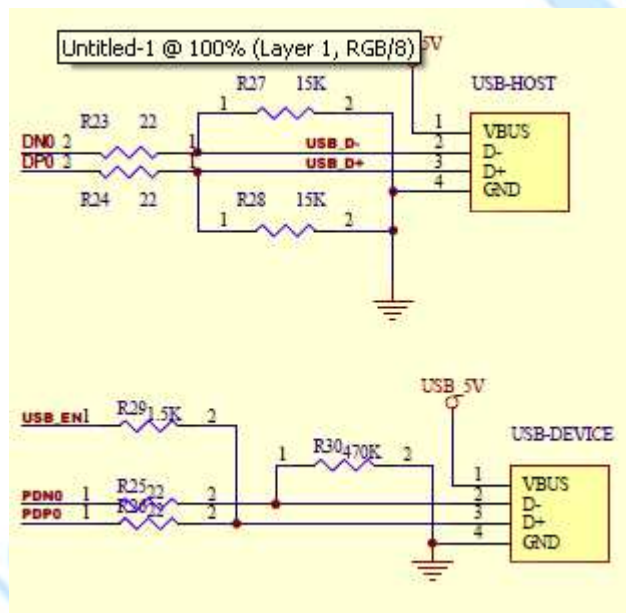


1.3.12 LCD Interface

The development board of the LCD interface is a white 41-pin 0.5 mm pitch block, which contains common LCD used most of the control signals (line-field scanning, the clock and enable, etc.), and complete RGB data signals (RGB output 8:8:8, that can support a maximum of 16 million colors LCD). In order to test user-friendly, but also leads to the PWM output (GPB1 can be sent configuration to keep PWM), and reset signals (nRESET), which is a backlight control signal LCD_PWR. In addition, 37, 38, 39, 40 for the 4-wire touchscreen interface, they can be directly connected to the use of touchscreen. J2 map board for the LCD drive power supply selection signals, we use the board drive 5 V power supply.

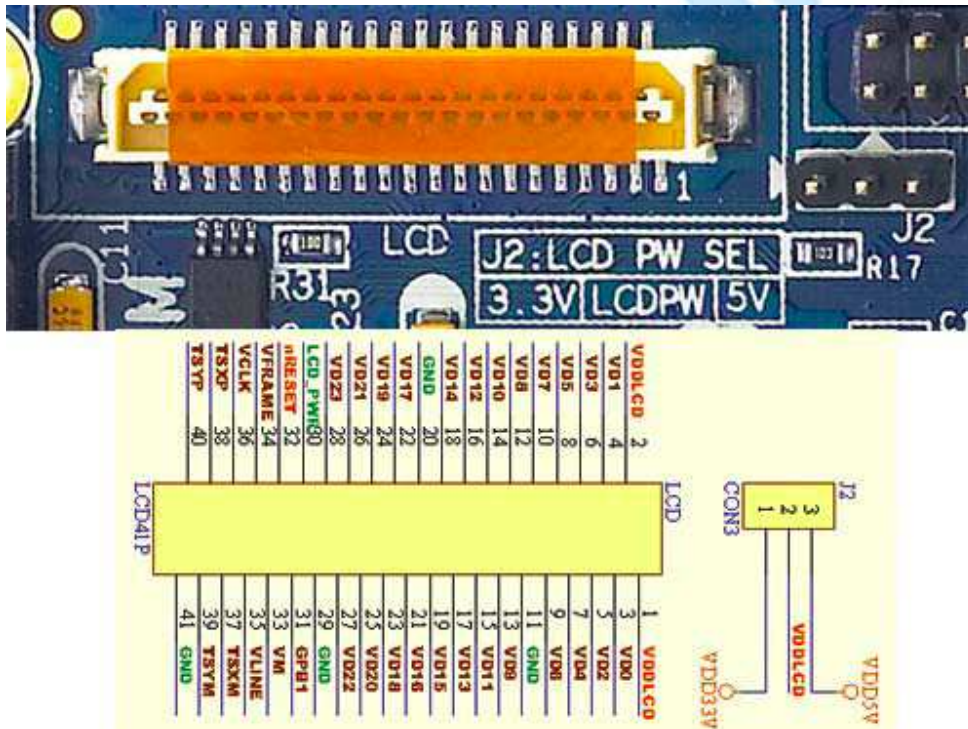

1.3.13 EEPROM


The development board has a direct connection to CPU's I2C signal pin EEPROM chip AT24C08, its capacity there is 256-byte, this is mainly for users to test the I2C bus, and it does not store-specific parameters.

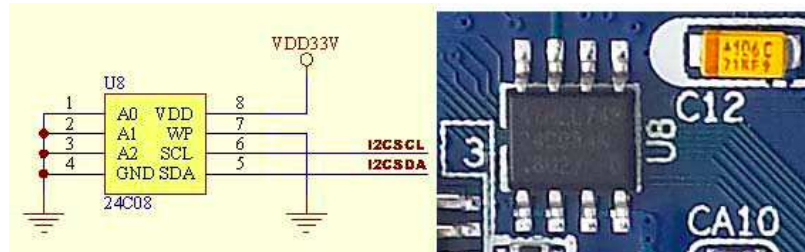

1.3.14 Network Interface


The development board used DM9000 LAN chip, it can be adaptive 10/100M network, RJ45 connector internal have been included in the coupling coil, there is no need to access another network transformers, the use of common lines of the development board can be connected to your routers or switches.

Note: Each development board MAC address of the network is the same, it can be set by software for Linux Users, and the relevant sections 2.4 of the manual introduce. For WinCE users, you can refer to the DM9000 driver inside the BSP code and registry file (platform.reg).

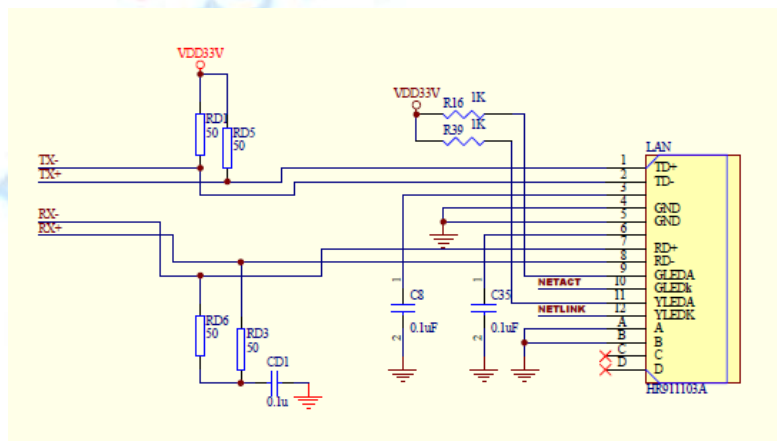

1.3.15 Audio Interface


S3C2440 built-in I2S bus interface, direct external 8/16-bit stereo CODEC, the development board used based on the I2S bus UDA1341 system audio decoder chip, the internal chip's registers are initialized and set up mining L3-bus with the bus connection control achieved, where we have used for a public board of Samsung design, respectively, the use of CPU's GPB2, GPB3, GPB4 port simulation of the L3-Bus specification L3MODE, L3DATA, L3CLOCK, their initialization end after UDA1341 are no longer useful, so these 3 control lines can also be used to achieve a common single-chip simulation. The output of audio systems for the development of common on-board aperture 3.5 mm socket, type is divided into 2 roads, all the way for the board Michael Grams of the wind, and the other way through the 2.0 mm socket CON10 white lead. 2-way audio input of the driver is different, only CON10 corresponding channel interface can be used in sound recording, please refer to our website update information, the 2 channels we will drive up the end.

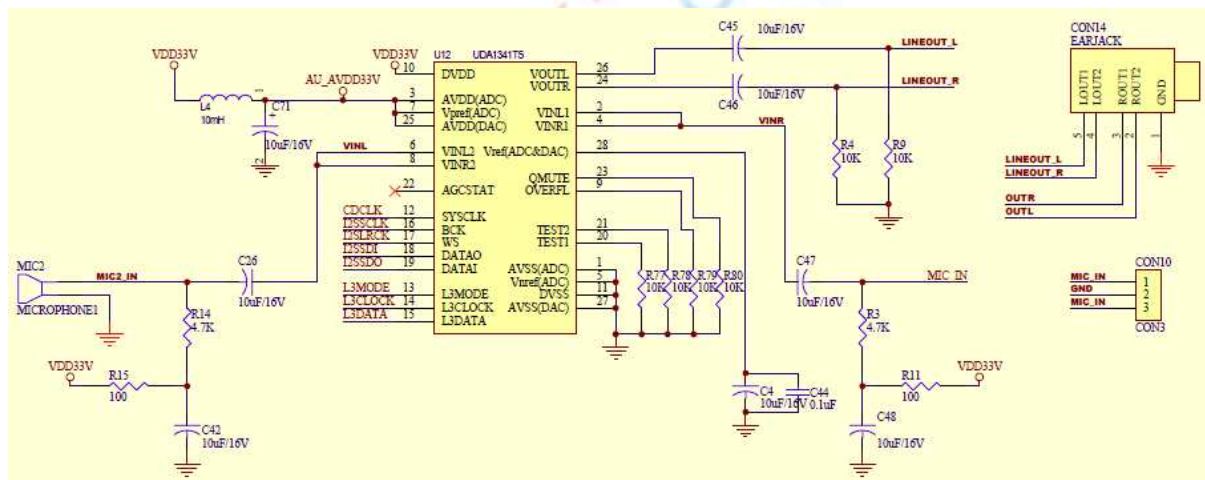

1.3.16 JTAG Interface

When the development board from the patch works offline, there is no process, then we generally through the JTAG interface programmer the first procedure is Supervivi, with Supervivi I can use USB to download more complex system procedures, this section at the back you can see. In addition, JTAG interface in the development of the most common is the single-step debugging purposes, whether it is common market JLINK or ULINK, as well as other simulation

debugger, and ultimately are connected through the JTAG interface. Standard JTAG interface is a 4-wire: TMS, TCK, TDI, TDO, respectively, for mode selection, clock, data input and data output lines, together with the power and that a total of six lines in general is enough, for the convenience of debugging, the majority of simulator also provides a reset signal. Therefore, the standard JTAG interface is mentioned above refers to whether the JTAG signal lines are not 20-pin or 10-pin formal definition of such performance. This is like USB interface, can be a side can be flat, also can be other forms of, as long as these interfaces includes a complete line of JTAG signals can be referred to as the standard JTAG interface. The development board provides a JTAG standard signal that contains the complete 10-pin JTAG interface, the definition of the pin shown in figure. Description: The intention is committed to Linux or WinCE for beginners in terms of development, JTAG interface is not essential any meaning and purpose, as most boards have been developed to provide a complete BSP, which includes the most common serial and network USB communications network, as well as I, when the system can be loaded with Linux or WinCE operating system, the user can fully use variety of high-level debugging operating system features, then do not need JTAG interface. Even if you need for tracking, but in view of the operating system, the complex structure of many interfaces, single-step debug like a needle in a haystack, there is no significance to speak of. Think about your use of the PC-on-hand will know, perhaps you have never seen or even heard of who in the PC motherboard play an emulator to debug PCI interface so Windows XP or Linux driver. This is why you, as common to hear or talk about so many people drive in the "transplant", because most people do refer to the achievement of senior-driven. JTAG is only for the user who not intends to install the operating system or to use simple operating system (for example uCos2, etc.). Development board provided by the majority of the Bootloader or BIOS is a basic system intact, and therefore do not need to single-step debugging.

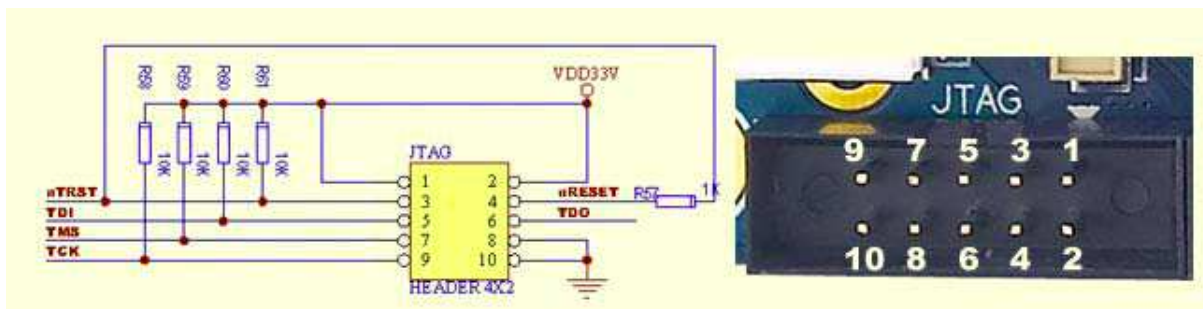

1.3.17 GPIO

GPIO is common referred to as input-output port. The development board with a 34-pin 2.0 mm pitch GPIO interface nominal for CON4, figure. In fact, CON4 surplus not only includes a lot of the GPIO pins, also contains a number of other CPU-pin, if AD0-AIN3, CLKOUT, etc. The map you see in the SPI interface, I2C interface, GPB0 and GPB1 and so on, it who is also GPIO, but special features are the definition of the nominal interface, these are available through the corresponding CPU storage to set their browser to change the use of the resources detailed in the table below the interface.



CON4	Network Name	Help (some ports reusable)	CON4	Network Name	Help (some ports reusable)
1	VDD5V	5V power supply (input or output)	2	VDD33V	3.3V power supply (output)
3	GND	ground	4	nRESET	Reset signal (output)
5	AIN0	AD input channel 0	6	AIN1	AD input channel 1
7	AIN2	AD input channel 2	8	AIN3	AD input channel 3
9	EINT0	EINT0/GPF0	10	EINT1	EINT1/GPF1
11	EINT2	EINT2/GPF2	12	EINT3	EINT3/GPF3
13	EINT4	EINT4/GPF4	14	EINT5	EINT5/GPF5
15	EINT6	EINT6/GPF6	16	EINT8	EINT8/GPG0

CON4	Network Name	Help (some ports reusable)	CON4	Network Name	Help (some ports reusable)
17	EINT9	EINT9/GPG1	18	EINT11	EINT11/GPG3/nSS1
19	EINT13	EINT13/GPG5/SPIMISO1	20	EINT14	EINT14/GPG6/SPIMOSI1
21	EINT15	EINT15/GPG7SPICLK1	22	EINT17	EINT17/GPG9/nRST1
23	EINT18	EINT18/GPG10/nCTS1	24	EINT19	EINT19/GPG11
25	SPIMISO	SPIMISO/GPE11	26	SPIMOSI	SPIMOSI/EINT14/GPG6
27	SPICLK	SPICLK/GPE13	28	nSS_SPI	nSS_SPI/EINT10/GPG2
29	I2CSCL	I2CSCL/GPE14	30	I2CSDA	I2CSDA/GPE15
31	GPB0	TOUT0/GPB0	32	GPB1	TOUT1/GPB1
33	CLKOUT0	CLKOUT0/GPH9	34	CLKOUT1	CLKOUT1/GPH10

1.3.18 CMOS CAMERA Interface


S3C2440 with a CMOS camera interface, in the development of on-board through the nominal interface leads to CAMERA. It is a 20-pin 2.0 mm pitch pin blocks, users can provide us with direct access to the CAM130 camera module. Fact CAM130 camera module without any circuit above, it is only a relay board, it is directly connected to the use of model ZT130G2 camera module, which is defined as shown in Fig. Description: CAMERA multiplexing interface is a port, it can be changed to set the corresponding GPIO enable register Use the following table is a list of the corresponding GPIO pin.



CAMERA	Network name	Reusable	CAMERA	Network name	Reusable
1	I2CSDA	GPE15	2	I2CSCL	GPE14
3	EINT20	GPG12	4	CAMRST	GPJ12
5	CAMCLK	GPJ11	6	CAM_HREF	GPJ10
7	CAM_VSYNC	GPJ9	8	CAM_PCLK	GPJ8
9	CAMDATA7	GPJ7	10	CAMDATA6	GPJ6
11	CAMDATA5	GPJ5	12	CAMDATA4	GPJ4
13	CAMDATA3	GPJ3	14	CAMDATA2	GPJ2
15	CAMDATA1	GPJ1	16	CAMDATA0	GPJ0
17	VDD33V	3.3V power supply	18	VDD_CAM	VDD_CAM
19	VDD18V	1.8V power supply	20	GND	ground

1.3.19 System Bus Interface

The development board for the system bus interface CON5, it contains a total of 16 data lines (D0-D15), 8 address lines (A0-A6, A24), there are some control signal lines (chip select, read and write, reset, etc.), CON5 can provide 5V voltage lose out A; a matter of fact, very few users to expand the peripheral bus. The following is the definition of CON5 detailed description pin.

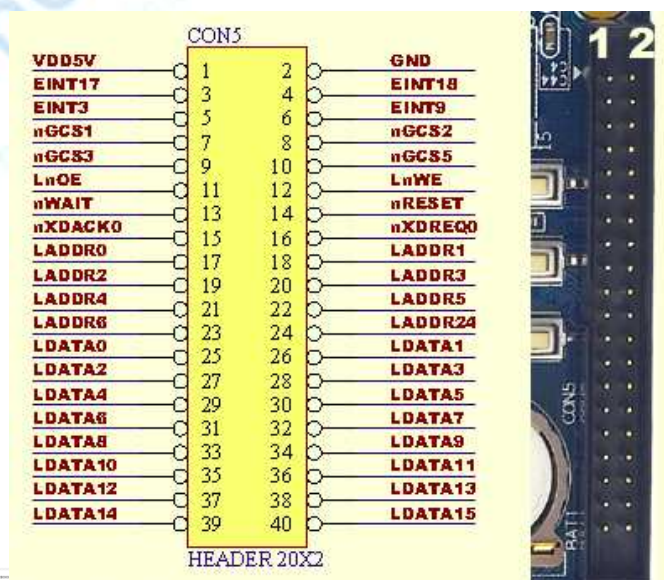

CON5	Network Name	Help (some ports reusable)	CON5	Network Name	Help (some ports reusable)
1	VDD5V	5V power supply (input or output)	2	GND	ground
3	EINT17	Interruption 17 (input)	4	EINT18	Interruption 18 (input)
5	EINT3	Interruption 3 (input)	6	EINT9	Interruption 9 (input)
7	nGCS1	Chip Select 1 The corresponding physical address: 0x08000000	8	nGCS2	Chip Select 2 The corresponding physical address: 0x10000000
9	nGCS3	Chip Select 3 The corresponding physical address: 0x18000000	10	nGCS5	Chip Select 5 The corresponding physical address: 0x28000000
11	LnOE	Read enable signal	12	LnWE	Write enable Signal
13	nWAIT	Wait for signal	14	nRESET	Reset
15	nXDACK0	nXDACK0	16	nXDREQ0	nXDREQ0
17	LADDR0	Address 0	18	LADDR1	Address 1
19	LADDR2	Address 2	20	LADDR3	Address 3
21	LADDR4	Address 4	22	LADDR5	Address 5
23	LADDR6	Address 6	24	LADDR7	Address 7
25	LDATA0	Data line 0	26	LDATA1	Data line 1
27	LDATA2	Data line 2	28	LDATA3	Data line 3
29	LDATA4	Data line 4	30	LDATA5	Data line 5
31	LDATA6	Data line 6	32	LDATA7	Data line 7
33	LDATA8	Data line 8	34	LDATA9	Data line 9
35	LDATA10	Data line 10	36	LDATA11	Data line 11
37	LDATA12	Data line 12	38	LDATA13	Data line 13
39	LDATA14	Data line 14	40	LDATA15	Data line 15